

***Keyless Entry
Addendum***

2005

Scepter

The information printed here reflects product design, fabrication, and component parts at the date of printing. The manufacturer reserves the right, at any time, to make changes in product design or material or component specifications as its sole option, without notice. This includes the substitution of components of a different brand or trade name, which will result in comparable performance. All information printed in this document is subject to change after the date of printing. Due to product improvements, changes during the model year and/or transcription errors that may occur, information represented within the owner's manual and/or this document may not be accurate at the time of your purchase. Please confirm any information with your dealer.

The following information supersedes the information published in the 2005 Scepter Owner's Manual in Section 5 (Equipment), pages 183-185. Please utilize the information provided henceforth.

©Monaco Coach Corporation. Holiday Rambler. All rights reserved. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this addendum are not endorsed by Monaco Coach Corporation.

KEYLESS ENTRY (OPTIONAL)

The keyless entry system features locking and unlocking bay and entry doors. Marker lights will flash as system is activated.

System is controlled by using a mounted control module, hand remote transmitter and keypad.


All motorhomes equipped with the keyless entry system are shipped from the factory with default five digit access and authority code settings. To assign a new authority code refer to the instruction manual in the Owner's Information File Box.

NOTE: It is recommended the access codes be personalized for security purposes before using the keypad.

Operation

Key Fob:

1. Locks entry door.
2. Unlocks entry door. The inside map lights will illuminate for a few seconds and the go out. Starting the engine will deactivate the lights.
3. Locks all compartment doors.
4. Unlocks all compartment doors.

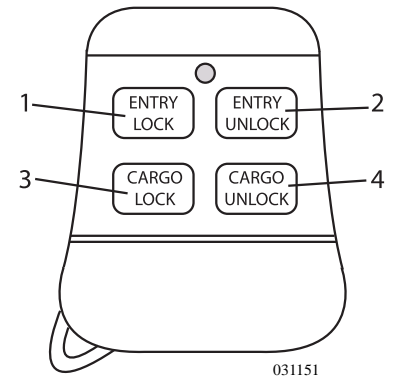


Locking Doors with Keypad:

Regardless of the configuration of the system, locking operation (lock all doors) is accomplished by pressing and holding down the first button (1 / 2) for 1 - 6 seconds. Marker lights will flash as system is activated. An access code is not needed to lock the doors.

Unlocking doors with keypad and other secure operations:

After access codes have been assigned secure operations can be accomplished by enabling the keypad. The key pad is "enabled" by entering a valid five digit access code. After entering the access code, the keypad is enabled for five seconds and a sixth button press initiates a secure operation, such as door unlocking or other operations. Entering the correct access code alone will not initiate a secure operation. If a sixth button is not pressed within five seconds then the keypad reverts back to a disabled state.

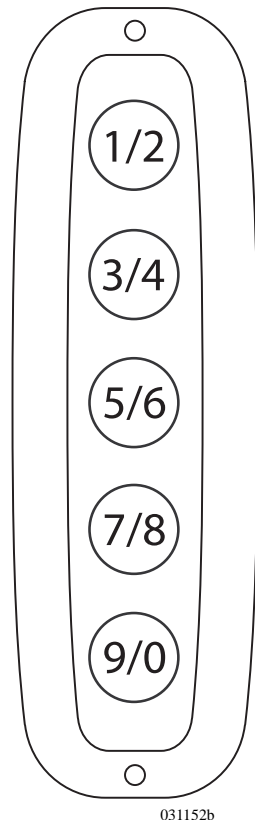

- First enter a valid five digit access code. Factory default is 1,2,3,4,5. Confirmation beeps indicate the system is enabled.
- Next press the (3 / 4) button within five seconds and all doors will unlock. The inside map lights will illuminate for a few seconds and then go out. Starting the engine will deactivate the lights.
- If an unassigned button or no button is pressed while the system is enabled, the keypad reverts back to disabled state.

Assign New Access Codes:

- Press the middle (5 / 6) button for five seconds, then release after the keypad provides a confirmation beep. The backlighting LED of the keypad will flash indicating the learn mode.
- Enter in the five digit authority code. Factory default is 77777. Keypad will provide confirmation beeps.
- Press and release the button that corresponds to the access number (see below). For example, press (1 / 2) first button for access #1 and press (3 / 4) second button for access #2. During this activity you are defining one of five access numbers. A subsequent code will be assigned to this access number. The keypad will provide a confirmation beep after this single button press.
- Enter in your new five digit access code. The keypad will provide confirmation beeps.
- Re-enter new access code. The keypad will provide confirmation beeps.
- **Ensure possession of entry door keys and test the new access code.**

After performing the above sequence, the keypad will automatically revert back to default operation mode.

Up to five different access codes can be assigned at one time. As additional access codes are defined, pre-existing access codes are over-written. For example, if a new access code is assigned for access #3, the previous access #3 code is no longer valid. The following chart can be used to document the access code assignments.

Access #	User Name	Digit 1	Digit 2	Digit 3	Digit 4	Digit 5
1						
2						
3						
4						
5						



Holiday Rambler

91320 Coburg Industrial Way

Coburg, OR 97408

800-634-0855

www.holidayrambler.com

Warranty/Technical Support

Toll Free 877-466-6226