

Addendum

Wheel Bearings

2008 Alumascape® & Alumascape Suite®



The information printed here reflects product design, fabrication, and component parts at the date of printing. The manufacturer reserves the right, at any time, to make changes in product design or material or component specifications as its sole option, without notice. This includes the substitution of components of a different brand or trade name, which will result in comparable performance. All information printed in this document is subject to change after the date of printing. Due to product improvements, changes during the model year and/or transcription errors that may occur, information represented within the owner's manual and/or this document may not be accurate at the time of your purchase. Please confirm any information with your dealer.

The following information is in addition to the information in the 2008 Alumascape® & Alumascape Suite® Owner's Manual's, Section 2 - Driving & Safety. Please utilize the information provided henceforth.

©Monaco Coach Corporation. All rights reserved. Alumascape®, Alumascape Suite® and Holiday Rambler® are registered trademarks of Monaco Coach Corporation. All other trademarks or registered trademarks are property of their respective holders. Brand name products of other companies mentioned in this addendum are not endorsed by Monaco Coach Corporation.

The following information supersedes the information in **Section 2 – Driving & Safety** of the 2008 Alumascape® & Alumascape Suite®.

WHEEL BEARINGS

Greasing Wheel Bearings (For Alumascape)

Wheel bearings should be inspected for corrosion or wear, and cleaned and repacked every 12,000 miles or 12 months whichever comes first.

INFORMATION

Contact axle manufacturer for detailed care and maintenance instructions.

Sealed Wheel Bearings (For Alumascape Suite)

The sealed wheel bearing system should be inspected every year or 12,000 miles, whichever comes first. The bearings are designed with a small amount of axial end play. This end play is essential to the longevity of bearings service life. The sealed bearing system is generally maintenance free and does not require annual repacking. The sealed bearing comes from the factory permanently greased for the duration of its life.

INFORMATION

Contact axle manufacturer for detailed care and maintenance instructions.

NOTE

A small amount of grease weeping from the seal area is normal. Excessive leakage indicates abnormal bearing operation. Excessive axial end play, restricted rotation, noise, or erratic rotation requires replacement of the bearing unit. Consult a qualified service technician for replacement.

INSPECTION

The sealed bearing system is generally maintenance free, however it does require inspection every year or 12,000 miles, whichever comes first.



MONACO®

Monaco Coach Corporation

91320 Coburg Industrial Way

Coburg, OR 97408

800-634-0855

www.monacocoach.com

Warranty/Technical Support

Toll Free 877-466-6226



**HOLIDAY
RAMBLER®**

This is Living®